


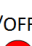


## Model: HY-2307



### Description:



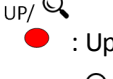

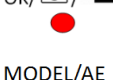
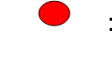
1. 14MP Panasonic COMS sensor
2. 14MP snap shot image and 720P video recording. One button switches snap shot & video mode. --- Button "  ".
3. 8 times digital Zoom, press "  " and "  " to zoom it.
4. Full HD HDMI output, output frequency is 720P, 60Hz.
5. Driver free. 1080P@30fps HD USB video output.
6. Support one key freeze/unfreeze image. When power on, press once the "  " button can achieve the function.
7. Support line drawing function. Up to 4 lines on horizontal and vertical which can be movable and set the line color and size. Meanwhile shows the cross line.
8. Support auto & menu exposure.
9. Support EV adjustment
10. Support EN/CH/DE/FR/IT/JP language setting.
11. Support 50Hz, 60Hz light source frequency setting
12. Support HCSD T-flash card (Class 4), max. 32GB.
13. Support to save the function setting after power off

### Ports Description:

1. HDMI video output
2. USB B-type HD video output

3. T-flash card port
4. DC power adapter port (DC12V 1A)

### Buttons Description:

1.  : On/off (freeze/ unfreeze) button
2.  : Menu
3.  : Up/Zoom +
4.  : DOWN/ Zoom -
5.  : Snap shot/ video/ ok (confirm)
6.  : MODEL/ AE (switch mode)

### Operation Description:

First Step: Power Supply

Inset the 12V 1A DC power adapter to the DC port.

Noted: USB cable can be powered as well.

Second Step: Power on


Press on/off button, Red indicate light is on, camera works well.

Third Step:


If use HDMI output, camera is under preview state; if USB output with PC, please install S-EYE software first. When use USB output, please remove the TF card from the camera.

Forth Step: Operation

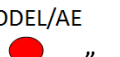
1. Snap shot


Under the HDMI output, press “  ” once for one image & save as JPEG format in TF card.

Note 1: Before snap shot a picture, make sure there is a TF card in the camera, not less than 2GB. Otherwise it will show an error.

Note 2: If it is error after inset the TF card or press “  ”, please enter menu to format TF card.


2. Video

Under HDMI output, press “  ”, green indicate light is on, then camera is in video mode.

Press “  ” once, green indicate light is flashing, camera is taking video. The video format is in H.264, 1080P@30fps & save in TF card.

Note 1: Before snap shot a picture, make sure there is a TF card in the camera, not less than 2GB.

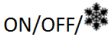
Otherwise it will show an error.

Note 2: If it is error after inset the TF card or press "  ", please enter menu to format TF card.

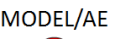
### 3. Digital Zoom

Under HDMI output, press "  " or "  " to zoom & adjust the image size on preview.

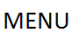

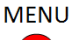
### 4. Freeze & Unfreeze

Under HDMI output and preview state, press "  " can freeze and unfreeze the image.

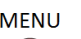
### 5. Auto / Manual exposure switch


Under HDMI output & preview state, press "  ", camera will switch auto/ manual exposure.


### 6. Lines display

Under HDMI output & preview state, press "  ", choose "line set" and you can select display lines or hide lines. If yes, press  and  to quick menu. Then the camera will show 4 lines on horizon & 4 lines on vertical.

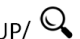

### 7. Lock & move the lines

Under HDMI output & preview state, press  and choose "line set", you can set the Line/ Line DIR, Line Position, Line color & Line weight per needed.

Noted 1: Enter "Line set" ---→ Cross Hair on ( press  )--→ show the cross hair on the center

Noted 2: Enter "Line", press  to select 1-8 lines show one the screen

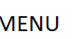
Noted 3: Line DIR, press  to switch VER or HOR

Noted 4: Line Position, press  or  to move the line position

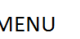
Noted 5: Line color, press  to select the line color



Noted 6: Line weight, press  to select the line weight

### 8. Language Setting





Under HDMI & preview state, press  , move to Language and enter, you can select display language: English/ French/ Dutch/ 简体中文/繁体中文/Japanese/ Spanish

### 9. Frequency

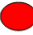
Under HDMI & preview state, press  & choose frequency, you can choose 50Hz or 60Hz

light source. Press  and save. Press  to quit

### 10. Exposure



Under HDMI & preview state, press  & choose exposure, press  or   
to adjust the exposure. Press  to save

### 11. Formatting

Under HDMI & preview state, press  & choose formatting, system will remind user about formatting the TF card.


NOTED: Be careful to use the FORMATTING function, it will clear all data of the TF card which inset the camera.

### 12. Default

Under HDMI & preview state, press  & choose Default, press  to default setting

Noted: It will clear all settings after you default the camera.

### Power off:

Press & hold  for a few second, camera will save all settings and power off. The red indicate light is off. Please remove power adapter

Thanks for your support!

Please kindly leave us a positive feedback after you receive the goods!